

7" Internet Tablet

In the box

Tablet, User Manual, USB Cable, AC Adapter

Location of controls

Front Camera, Back Camera, Speaker, Mic, DC Input, Mini USB Port, MicroSD Card Slot, Power/Lock/Unlock

Basic operation

Charging the battery: Connect the tablet to a wall outlet using the included AC adapter.

Turning on the tablet: Press and hold the **Q** button until the startup screen appears.

Unlock (enter) the tablet: Slide the "Lock icon" to the right.

Lock (standby) the tablet: To lock or unlock the tablet, briefly press the **Q** button (lock the device to conserve the battery).

Turning off the tablet: For quick power-off, you can select the "Power" button on the Polaroid Settings widget.

Battery Tip: Turn off Wi-Fi when it's not in use. Lock the tablet (the display is off) to shorten charging time. To conserve battery life and performance, adjust the "Brightness" and "Screen timeout" options in the Settings app.

Home screen

On the Home screen, you can place app shortcuts and widgets.

Home screen (left): Polaroid Media widget

Home screen (center): Polaroid Home widget

Home screen (right): Polaroid Settings widget

Access apps & widgets screen: Press **Q** to access the Apps & widgets screens.

Placing apps & widgets on the Home screen: Press & hold an app or widget to place it on one of the Home screens.

Removing shortcuts or widgets: Press and hold the app or widget and slide it as shown below.

Micro SD card: Insert the card face up into the card slot until it clicks and locks into place.

Transferring and managing files: It is possible to manage and transfer media files to the tablet by connecting it to your computer.

Conserving Internal Memory: It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Connecting to Wi-Fi & downloading apps

Setting up Wi-Fi: To browse web sites, use e-mail and download apps, you must first connect the tablet to the internet.

Download an App Store: To access a large library of free and paid apps and games, you need to download an app store. We have provided links to several app stores that can be easily accessed by selecting the "Download App Stores" option on the Settings widget.

Download and installing apps: After downloading the selected app store, it is possible to download and install apps directly to the tablet - these apps will appear on the Apps screen.

Games: Sometimes, while playing games, the g sensor on the tablet may not function correctly. This results in games not being controllable. To correct this problem, follow the steps below.

Camera and video chat

Front facing camera: Select **Q** on the apps screen to go to camera mode. It is possible to take pictures or videos with the built-in front facing camera.

Video chat: Use the built-in, front-facing camera to video chat with friends and family.

Sharing pictures: To share pictures to Email, Facebook or Twitter, tap the picture to view the picture and then tap the share icon.

Specifications:

- Operating System: Android 4.0 (Ice Cream Sandwich)
- Processor: ARM CORTEX-A8
- Processor Speed: 1GHz
- RAM: 512MB DDR3
- Graphic Accelerator: OpenGL ES 2.0 GD game support
- Memory: Internal Memory: 4GB
- Display: 7" Capacitive touch screen
- Display Resolution: 800x480 (16:9), 4 way auto rotation
- Cameras: 0.3MP Front camera, 2.0MP Rear camera
- Network: Wi-Fi (802.11 b/g/n)

Web browsing

Select "Browse" on the Home or Apps screen. You must connect to Wi-Fi before accessing the web.

Setting up e-mail

Select "Email" on the Home or Apps screen and follow the instructions to set up your email account on the tablet. (You must connect to Wi-Fi before accessing or setting up email accounts.)

Photo gallery

Select "Gallery" on the Home or Apps screen to access pictures and videos stored on the tablet or Micro SD card.

Viewing pictures: Pinch to enlarge or shrink, and swipe to go to previous or next pictures.

Watching videos: While playing a video, tap the display to access the video controller, tap the display again to hide the controller.

Transferring and managing files

Inserting Micro SD card: The tablet supports Micro SD cards up to 32GB (not included).

Unmount & remove the Micro SD card:

- Open "Settings".
- Select "Storage".
- Select "Unmount Micro SD card".
- It is now safe to remove the card from the tablet.
- To remove the card, gently push it in until it pops out.

Connecting the tablet to a PC or Mac:

- Connect the included USB cable to the "USB" port of the tablet and USB port of the computer.
- The "USB connected" screen appears, select "Turn on USB storage", then select "OK".
- To access the Micro SD card, select "File Manager" from the Apps screen.

USB Connected screen: Press to proceed. Previous to exit the USB connect screen.

File Manager: To view, open, copy or delete files on the internal memory of the tablet or inserted Micro SD card, select "File Manager" from the Apps screen.

Conserving Internal Memory: Transfer media files to "Removable Disk" (Micro SD card).

Browsing files

File Manager: To view, open, copy or delete files on the internal memory of the tablet or inserted Micro SD card, select "File Manager" from the Apps screen.

Conserving Internal Memory: Transfer media files to "Removable Disk" (Micro SD card).

Multimedia

Use the tablet to store and play music, pictures and video files.

Music: Music files stored on the tablet.

Music playback screen: Press & hold a song icon, and these options will appear.

Music playback options: Press to proceed. Previous to exit the USB connect screen.

Settings

Settings app: Select and customize the options in "Settings" to conserve battery performance, adjust display options, manage Wi-Fi, change display options, set passwords and more.

Online help

Select "Online Help" on the Apps screen to access:

- App stores
- Firmware updates
- Technical support
- Product registration

Software updates

Your tablet is capable of receiving OTA (over the air) updates. The tablet is set to automatically check for updates, and will notify you when there are updates available.

Resetting

In the event that the tablet freezes or does not function properly, try resolving the problem by pressing the RESET button located on the back panel (shown below).

Restore

If the problem persists it may be necessary to restore the tablet to the factory default settings.

Specifications

- Operating System: Android 4.0 (Ice Cream Sandwich)
- Processor: ARM CORTEX-A8
- Processor Speed: 1GHz
- RAM: 512MB DDR3
- Graphic Accelerator: OpenGL ES 2.0 GD game support
- Memory: Internal Memory: 4GB
- Display: 7" Capacitive touch screen
- Display Resolution: 800x480 (16:9), 4 way auto rotation
- Cameras: 0.3MP Front camera, 2.0MP Rear camera
- Network: Wi-Fi (802.11 b/g/n)

Legal information

FCC Part 15: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Limited Warranty

This product as supplied and distributed new by AIT, Inc. ("AIT") to the original consumer purchaser is warranted against material and workmanship for a period of one year from your date of purchase. In the unlikely event that this product is defective, or does not perform properly, you may return it to the authorized service center for repair or replacement.

Customer Support:

Monday - Friday: 8AM - 10PM (EST)

Polaroid